



## APARTMENT DOOR KNOCKER WITH VIEWER

FOR USE ON EXTERIOR OR INTERIOR DOORS  
OF HOMES, CONDOMINIUMS, APARTMENTS  
AND OFFICES.

### INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 1/4" and 1/2" drill bits,  
awl and screwdriver.

1. Position template (right) centered from side to side 60" above threshold. Tape template to outside of door.
2. Mark centers with awl (or nail) and drill holes (A) with 1/4" drill bit completely through door.
3. Drill hole (B) for viewer with 1/2" drill bit completely through door from outside.
4. Mount door knocker with screws and cover washers.
5. Insert viewer (C) through knocker from outside. Insert receiver tube (D) from inside and tighten. See illustration.

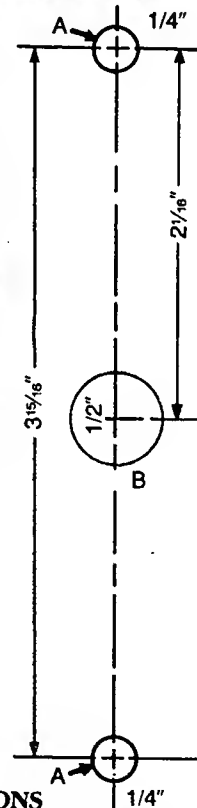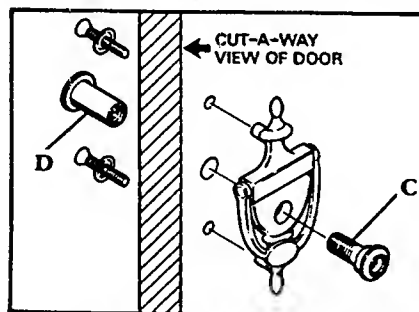

### MAINTENANCE INSTRUCTIONS

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



KNOCKER VIEW C2-31252-605 BRT  
MADE EXCLUSIVELY FOR H. B. IVES IN PORTUGAL

H.B. Ives, New Haven, CT. 06511

3125 / 31252

## APARTMENT DOOR KNOCKER

FOR USE ON EXTERIOR OR INTERIOR DOORS OF CONDOMINIUMS, APARTMENTS AND OFFICES

02-3125-605 (BRIGHT) 02-31252-605 (BRIGHT)  
02-3125-609 (ANTIQUE) 02-31252-609 (ANTIQUE)

### INSTALLATION INSTRUCTIONS

(Steps 3 & 5 for Viewer Installation Only)


TOOLS REQUIRED: Drill 3/8" and 1/2" drill bits, awl and screwdriver.

1. Position template (right) centered from side to side 60" above threshold. Tape template to outside of door.
2. Mark centers with awl (or nail) and drill holes (A) with 3/8" drill bit completely through door.

3. **FOR VIEWER INSTALLATION ONLY**  
Drill hole (B) for viewer with 1/2" drill bit completely through door from outside.

4. Mount door knocker with screws and coverwashers.

5. **FOR VIEWER INSTALLATION ONLY**  
Insert viewer (C) through knocker from outside. Insert receiver tube (D) from inside and tighten.

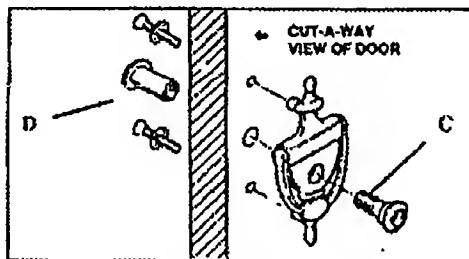


### MAINTENANCE INSTRUCTIONS

Polish with a soft cloth. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



DOOR  
KNOCKERS



MAIL SLOTS




VIEWERS



HOUSE  
NUMBERS

USE TEMPLATE  
BELOW FOR EASY  
INSTALLATION OF  
DOOR KNOCKERS

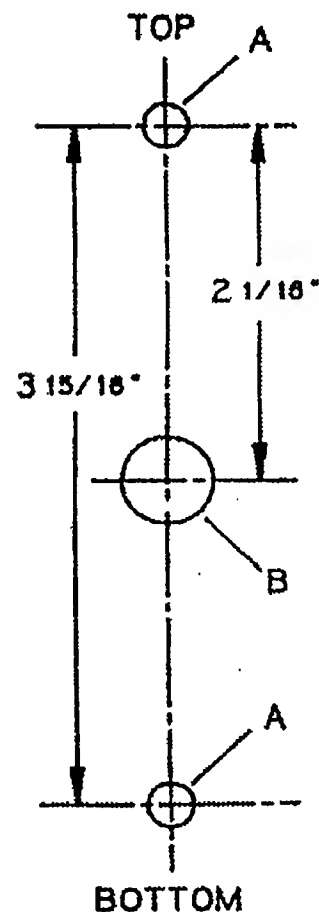

**IVES**